KS-19594 DIALER

TELEPHONE SETS EQUIPPED WITH $TOUCH ext{-}TONE_{\oplus}$ DIALS CONNECTIONS

1. GENERAL

- 1.01 This section is reissued to:
 - ●Add 2830A1M, 2831A1M, and 2851A1M telephone sets to Table A.

Changes or additions in the body of tables are indicated by shaded areas.

2. CONNECTION



The power supply cord should not be connected to the AC power line receptacle when removing the housing or making any connections.

- 2.01 Power Supply Unit: Refer to dialer installation section for mounting instructions.
- 2.02 Dialer Telephone Cord:
 - Standard six conductor cord
 - Secure inside the equipment under a cord clamp or by taping to set mounting cord
 - Dress wires to allow proper operation of equipment

- 2.03 Dial Pulsing Contacts (red and green cord conductors): Place in series with the green lead of TOUCH-TONE a dials.
- 2.04 Off Normal Contacts (blue and white cord conductors): Place across receiver contacts in telephone sets.
- 2.05 Off Normal Contacts (yellow and black cord conductors): Place across loudspeaker contacts in speakerphone sets.



Test the operation of the dialer by recording and calling the telephone number usually called for job completion. For installations with speakerphones, be sure to test with speakerphone operating to insure proper connection to off normal contacts.

- 2.06 Connection Index:
 - Table A—Dialer Connections To Telephone Sets Equipped With TOUCH-TONE Dials
 - Table B—Dialer Connections to CALL DIRECTOR®,
 Telephone Sets and TRIMLINE®
 Telephone Sets Equipped With
 TOUCH-TONE Dials
 - Fig. 1—KS-19594 Dialer, Power Supply Connections

METARG PASSA TIN

CONNECTION FOR LIZ STANDARD CONNECTION DIALER UNIT POWER SUPPLY AC POWER CORD (18 INCHES) DIALER POWER CORD (5 FEET) YO Ø Y 28V AC (BK) B 04 Ø B (G) 6 Ø-Ø G +18V DC (R) R Ø-Ø R -18V DC 60 CPS NOT UNDER CONTROL OF SWITCH CONNECTION FOR INCREASING DISTANCE
DIALER CAN BE PLACED FROM POWER SUPPLY

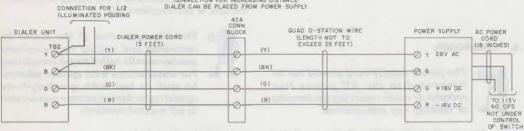


Fig. 1—KS-19594 Dialer, Power Supply Connections

TABLE A DIALER CONNECTIONS TO TELEPHONE SETS EQUIPPED WITH TOUCH-TONE DIALS

KS-19594 DIALER TEL CORD		568HT	1500D 1500Y 1502B 1515B 155BD	1500M	1500\$	1511F/H	15548	1510F 1555B	
P U L S I	R	Remove G dial lead from 2 on the term. strip and	Remove G dial lead from F on the network and Connect	Remove G dial lead from 1 on the term. strip and to R of dial	Remove G dial lead from 8 on the term. strip and er tel cord wi	Remove G dial lead from F on the network and th D-161488 c	Remove G dial lead from 1 on the term. strip and	Remove (dial lead from F on the network and	
G	G	Term. 2 on term. strip	F term. on the network	Term. 1 on term. strip	Term. 8 on term. strip	F term. on the network	Term. 1 on term. strip	F term. on the network	
O F F N O R	W	Term. 3 on term. strip	With 25A3 or 25B3 dial GN term. on network With 25W3 or 25Y3 dial R term. on network						
M A L	DL 1 4 ON 1 10 ON 1 P. ON 1 10 ON 1 L1 ON THE							n. 10 n. strip	
S P E A K E R	Y	ON term. on term. strip	a	ulate nd ore	Term. 5 on term. strip	Term. 8 of the term. strip	Insulate and store in the tel set		
P H O N E	ВK	•N 1 term. on term. strip	a	ulate nd ore	Term. 6 on term. strip	Term. 4 of the term. strip	store	ite and in the set	

TABLE A (Cont)

DIALER CONNECTIONS TO TELEPHONE SETS EQUIPPED WITH TOUCH-TONE DIALS

D	-19594 IALER CORD	15110	1514B	1543DB (MD)	1563НВ	1564HK 1564HL	1565GK 1565HK 1565LK	1568HT	
P U L S	R	Remove G dial lead from L1 on the network	Remove G dial lead from 2 on the term. strip and Connect	from	move G dial le L1 on the ne and er tel cord wi		Remove G dial lead from L2 on the network and	Remove G dial lead from 3 on the 636-type key term. strip and	
N G	G	L1 term. on the network	Term. 2 on the term. strip	L1 te	erm. on the ne	twork	L2 term. on the network	Term. 3 on the 636-type key term strip	
O F F	W	GN term. on the network	Term. 8 on the term. strip	Term. 1 on the term. strip	Term. 6 on the 241A amplifier	R term. on the network	GN term. on the network	Term. 2 on the 636-type key term strip	
O R M A L	BL	Term. 13 on the term. strip	Term. 11 on the term. strip	Term. 2 on the term. strip	Term. 8 on the term. strip of 636-type key	Term. 6 on the 636-type key term. strip	Term. 4 on the 636-type key term strip		
S P E A K	Υ	Term. 10 on the term. strip	100 M	Insulate and	Term. 7 on the 636-type key term. strip				
R P H O N E	вк	Term. 12 on the term. strip	on the Insulate and store in tel set				Term. 8 on the 636-type key term. strip		

TABLE A (Cont)

DIALER CONNECTIONS TO TELEPHONE SETS EQUIPPED WITH TOUCH-TONE DIALS

D	I-19594 DIALER L CORD	1702B 1702D 1712B 1713B	1750 1751 1753	1752	2500D	2511F	2554B 2558D	2702B 2702D 2712B 2713B	
	R	Remove G dial lead from F on the network and Connect		Remove G dial lead from N of the term. board and t to R of dialer	dial lead from N of the term. board Remove G dial lead from F on the response to the results of				
(;	G			N of the term. board	F term. on the network				
O F F N	W	With 25A3 or 25H4 dial GN term. on network With 25W3 or 25P4 dial R term. on network		GN term. on the network	R term. on the network				
R M A L	BI.	Term. 5 of the term. strip	Term. 13 of the term. strip	Term. 6 of the term. board		erm. network	Term. 10 of the term. strip	Term. 5 of th term. block	
S P E A K	Y	Insulate and store in tel set		Term. 7 of the term. board	Insulate and store in tel set	Term. 4 of the term. strip	Insulate in te		
R P H O N E	вк		and store	Term. 8 of the term. board	Insulate and store in tel set	Term. 8 of the term. strip	Insulate in te		

KS-19594 DIALER TEL CORD		2500M 2502B 2510F 2515B	2500Y	2500S	2514B	2555B	2563HB			
P U L S I N	Remove G dial lead from 1 of R term. strip and		dial lead dial lead dial lead from 1 of from F from 1 of term. strip on the network and and and		dial lead dial lead from 1 of from F from 1 of term. strip on the network			Remove () dial lead from F on the network and	Remove G dial lead from L1 on the network and	
	G	I term. of the term. str	F on the	l term. of the term. strip	RR on the network	F' on the network	LI on the network			
O F F	w		R on the nets	work	8 of the term. strip	R on the network	8 of the term. strip			
N O R M A L	BL.	reserve of	S on the net	work	1 of the 241A amplifier term. strip	10 of the term. strip	S on the network			
S P E A K E R P H O N E	Y	# T T T T T T T T T T T T T T T T T T T	Insulate and store	5 of the term. strip	erial el Si AI	Insulate and stor	re			
	вк		Insulate and store	6 of the term. strip	Sold for		re			

TABLE A (Cont)

DIALER CONNECTIONS TO TELEPHONE SETS EQUIPPED WITH TOUCH-TONE DIALE

KS-19594 DIALER TEL CORD		2564HL	2565GK	2565HK 2565HL	2751 2753	2754	2752	2830A1M 2831A1M	2851A1M	
P U L S	R	Remove G dial lead from L1 on the network and	Remove G dial lead from G on the network and	Remove G dial lead from L2 on the network and	Remove G dial lead from F on the network and	dial fro of term.	ove G lead m 3 the board	Remove G dial lead from 8 of the term. board and	Remove G dial lead from 20 of the term. board and	
I N	Connect to R of dialer tel cord with D-161488 connector									
G	G	L1 on the network	G on the network	L2 on the network	F on the network	term.	f the board	8 of the term. board	20 of the term. board	
O F F	W	GN on the network		1 1	e netwo	rk				
N O R M A	BL	7 of the term. strip	S on the	network	13 on 6 of the strip TB1 term. board		S of the term. board			
S P E A K	Y	Insulate and store	589- or	Term. 7 of the 589- or 636-type key term. strip		37.	7 of the term. board	24 of the term. board	17 of the term. board	
E R P H O N E	вк	Insulate and store	Term. 8 of the 589- or 636-type key term. strip		Insulate and store		8 of the term. board	30 of the term.	15 of the term.	
			5-1 5-				1-			

TABLE B DIALER CONNECTIONS TO $CALL\ DIRECTOR$ TELEPHONE SETS AND TRIMLINE TELEPHONE SETS EQUIPPED WITH TOUCH-TONE DIALS

		TRIMLINE	CALL DIRECTORS							
D	5-19594 DIALER TEL CORD	1220 HAND TEL SET	1616A2	1623A	1631 1632 1634 1634 1635 2631 2631		1636 1637 1638 2630 1639 2634 1639 2635 2636 2635			
P U L S I N G	R	Connect to G of inside wire (one side of Coline) at suitable connecting block. Disconnect G of D5A1. mounting cord	Remove G dial Remove G dial lead from 4 on the term. block and and Connect to R of dialer tel cord with D-161488 connector							
	(;	Connect to G of D5AL mounting cord at spare connecting block term., or use D-161488 connector	Term. 6 on term. board TB2		Term. 4 on the term. block					
O F F	W	Connect to G of D5A1. mounting cord and G of the dialer tel cord	Term. 5 on the 241A amplifier	L1 on the network	GN on the network	Term. 5 on the 241A amplifier	R on the network	Term. 6 on th 241A amplifie		
O R M A L	RI.	Connect to R of D5AL mounting cord and R of inside wire at connecting block term.	L.1 on the network	L2 on the network		L1 term. on	the network	1		
S P E A K E	Υ	Insulate and store	Term. 4 on term. board TB2		11 of block	lnsulate and store	Term. 11 on term. block	Insulat and store		
R P H O N E	вк	Insulate and store	Term. 5 on term. board TB2		12 of block	Insulate and store	Term. 12 on term. block	Insulat and store		

Page 8 8 Pages