SPEAKERPHONE SYSTEM—3-TYPE

2660-TYPE TELEPHONE SETS

CONNECTIONS AND MAINTENANCE

1. GENERAL

- 1.01 This section is reissued to:
 - Change section reference in 3.01.
 - Show 666A transmitter MD, Fig. 2.
- 1.02 This section covers information necessary to modify and connect the 2660A1 telephone set to provide speakerphone service.
- 1.03 Replace the D3BN mounting cord furnished with this telephone set with a D10R mounting cord (ordered separately). Connect leads and modify set wiring in accordance with Table A and Fig. 1.

2. CONNECTION INDEX

- Table A—2660A1 Telephone Set Modification For Speakerphone
- Fig. 1—2660-Type Telephone Set Wired For 3-Type Speakerphone and 1A1 or 1A2 KTS
- Fig. 2—2660-Type Telephone Set, Connections To 3-Type Speakerphone

3. MAINTENANCE

3.01 Refer to ♦Division 502♦ for maintenance information for the 2660-type telephone sets and to ♦Division 512♦ for maintenance of 3-type speakerphone components. Also refer to Fig. 1.

TABLE A
2660A1 TELEPHONE SET—MODIFICATION FOR SPEAKERPHONE (NOTE 1)

WIRE OR LEAD		1A1 OR 1A2 KEY TEL SYS	OR BRIDGED	RING PARTY	TIP PARTY	
Line Switch	(BR) (Y) (S)			-	* A G cord (S-W) lead†	
	(G) (W)	L2 C	L2 C	L2 C	L2 C	
Dial	(G)	A	A	G	A	
Ringer Strap	(G)	TB1-7 to L2	TB1-7 to L2	TB1-7 to L2	TB1-7 to G	
D10R Mounting Cord (Note 2)	R (BL-W) T (W-BL) A1 (O-W) AG (W-O) R1 (G-W) T1 (W-G) IR (BR-W)	L2 A G F L2		L2 G A * L2 dia! (O) lead† dia! (V) lead†	L2 A G * L2	
	LK (S-W)		Connect to line switch (S) lead†			
	A (W-S)	F	*	*	*	

^{*} Insulate and store.

[†] Use D-161488 connector (3 required).

Notes 1: Terminals on network unless otherwise noted.

^{2:} Replace D3BN cord with D10R (ordered separately).

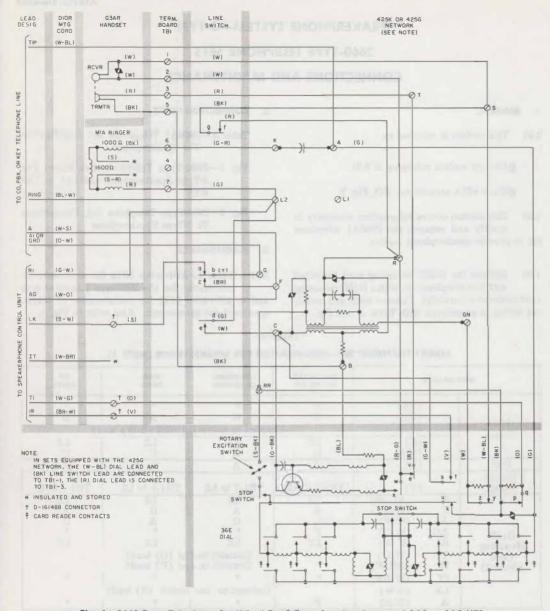


Fig. 1—2660-Type Telephone Set Wired For 3-Type Speakerphone and 1A1 or 1A2 KTS

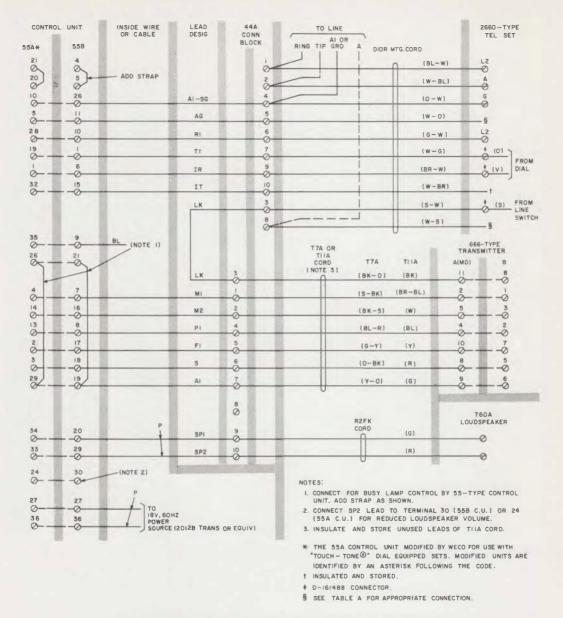


Fig. 2—2660-Type Telephone Set, Connections To 3-Type Speakerphone