

## SPEAKERPHONE SYSTEM—3-TYPE

### 2662-TYPE TELEPHONE SET

### CONNECTIONS AND MAINTENANCE

#### 1. GENERAL

1.01 This section covers connection of the 2662-type telephone set when used with the 3-type speakerphone system.

1.02 This section is reissued to:

- Change section reference in 2.01 and 3.01.
- Show 666A transmitter MD, Fig. 1.

#### 2. CONNECTIONS



*For proper operation of the 3-type speakerphone system, ground must be present on the A1-lead. Connect A1 ground to the appropriate terminal*

*on the telephone set or at the 55-type control unit for 1A1 and 1A2 KTS. Connect SG ground for 1A KTS.*

2.01 Services such as interrupted buzzer or ringer and station busy lamp control can be connected through relay contacts of the 55-type control unit. For connections of these and other services, refer to Division 512. †

#### 3. MAINTENANCE

3.01 † Maintenance of the 2662-type telephone set is found in Division 502. Division 512 covers maintenance of speakerphone components. †

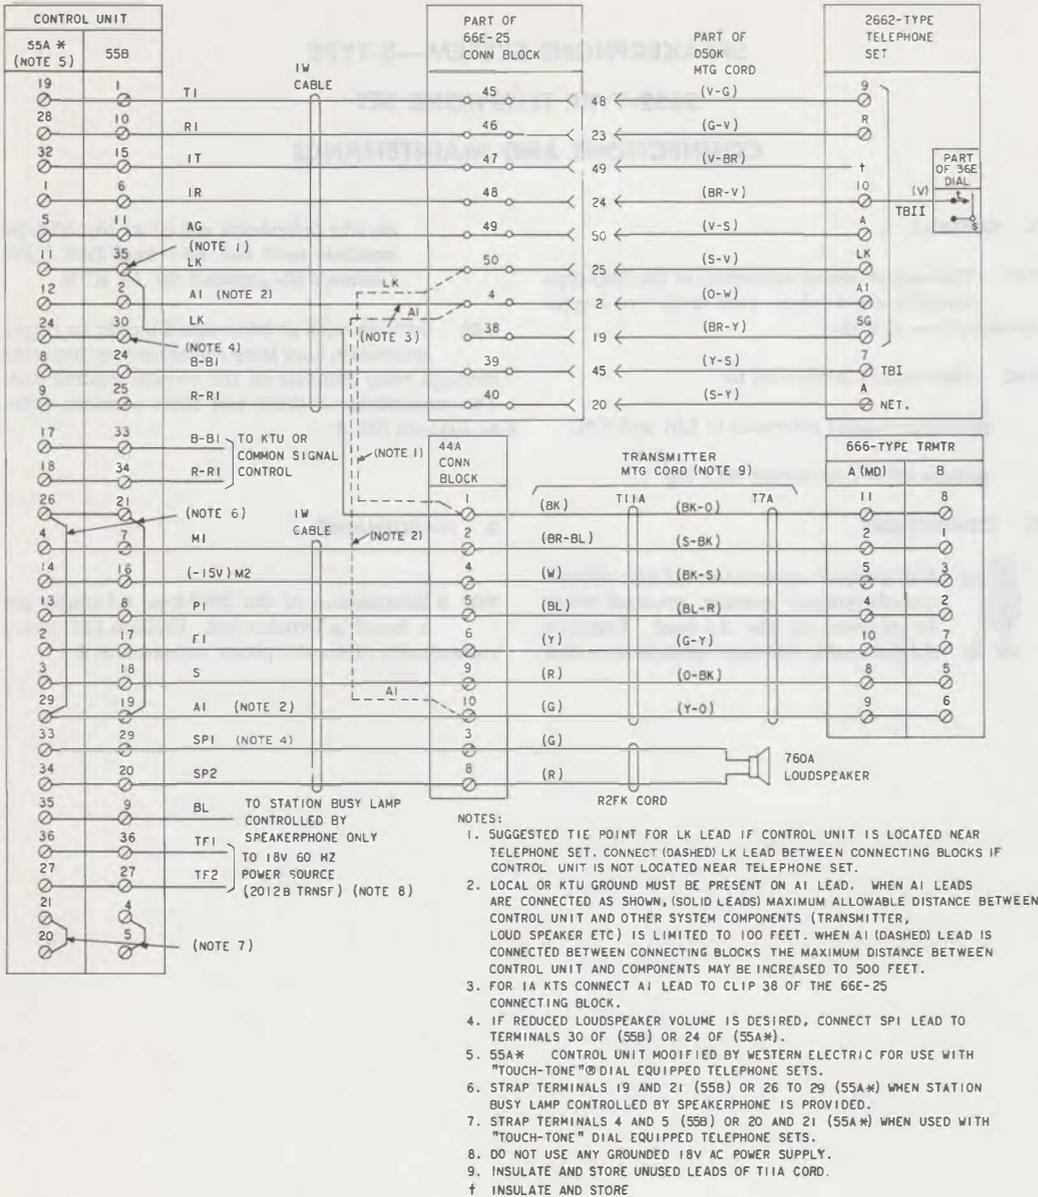


Fig. 1—2662-Type Telephone Set, Connections to 3-Type Speakerphone