TELEPHONE SET BASES—KIT PLAN

IDENTIFICATION, INSTALLATION, CONNECTIONS, AND MAINTENANCE

I. GENERAL

1.001 This addendum supplements Section 503-100-103, Issue 1.

1.002 This addendum is issued to add information on the current version of the 840200000 Universal Dial Number Plate.

3. INSTALLATION

DESK-TYPE SETS

(a) To assemble a 500-type telephone set:

The following changes apply to Part 3(a) of this section:

- (2.1) Current production dial number plate requires no modification to be used with either the early version or current version of the 9-type dial (Fig. 3.1 and 3.2).
- (3.1) Current production dial number plate requires no modification to be used with either the early version or current version of the 7-type dial (Fig. 3.1 and 3.3).
- (a) Fig. 3.1 added
- (b) Fig. 3.2 added
- (c) Fig. 3.3 added

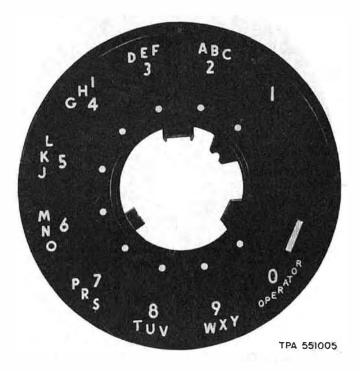
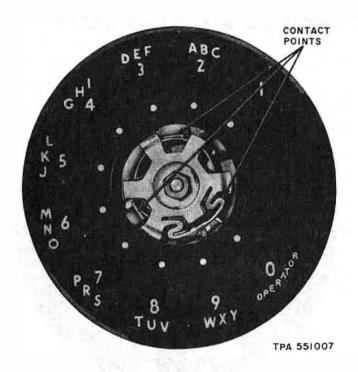


Fig. 3.3—Universal Dial Number Plate, Current Version



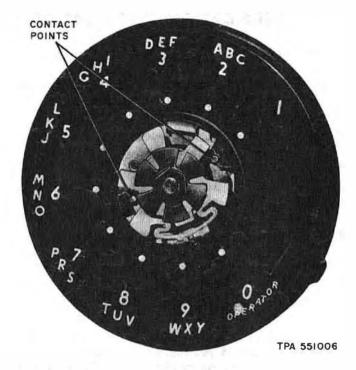


Fig. 3.2—Current Universal Dial Number Plate With 9-Type Dial

Fig. 3.3—Current Universal Dial Number Plate With 7-Type Dial

TELEPHONE SET BASES—KIT PLAN

IDENTIFICATION, INSTALLATION, CONNECTIONS, AND MAINTENANCE

1. GENERAL

1.01 The kit plan provides for a vehicle stock of telephone set components to fulfill a majority of the daily *unknown* set installation requirements and maintenance of general purpose telephone sets.

1.02 Under the kit plan certain telephone set bases together with a kit which consists primarily of new color components, and a handset equipped with a handset cord are separately packaged to be field assembled.

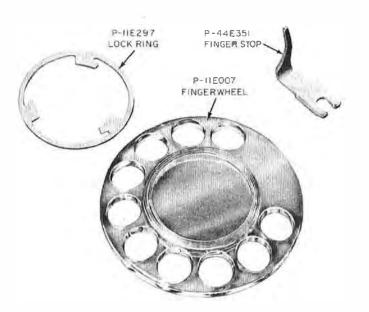


Fig. 1—9-Type Dial Adapter Parts

1.03 The following type telephone sets assembled in the field from bases and other components are included in the kit plan.

- Rotary Sets-Desk and Wall 500D/554B
- PRINCESS[®] Sets—Rotary and TOUCH-TONE^{*} sets 702B/2702B

- TOUCH-TONE Sets—Desk and Wall 2500D/2554B
- Telephone Bases—AC1/AD1

2. IDENTIFICATION

Ordering Guide, See Table A

3. INSTALLATION



A telephone set should be assembled from component parts listed in Table A when the required telephone set is not available on the service truck.

DESK-TYPE SETS

- (a) To assemble a 500-type telephone set:
 - (1) A package of dial adapter parts for a 9or 7-type dial will be packed with the base depending on type dial on the base.
 - (2) 9-Type Dial: (Early version), install dial number plate (packaged with housings) finger stop, lock ring, and finger wheel (Fig. 1). (Current version) requires the two tabs with holes be broken off universal dial number plate and parts shown in (Fig. 1) be used except for P-11E297 lock ring. New P-17A422 ring assembly (Fig. 3) furnished with universal dial number plate is required. Provide station number card.

(3) 7-Type Dial: (Early Version), install dial number plate (ordered separately) using two screws from adapter parts. Install clamp plate, finger stop and finger wheel (Fig. 2), (Current version) requires the two tabs without holes be broken off universal dial number plate and parts shown in (Fig. 2) be used except for two P-174053 screws and P-21F244 finger stop. New P-17A422 ring assembly

TABLE A

ORDERING GUIDE

BASE, SET TEL. (SEE NOTE)	500D1M INCLUDES 9-OR 7-TYPE DIAL ADAPTER PACKAGE †	554B1M INCLUDES 9-OR 7-TYPE DIAL ADAPTER PACKAGE †	702B1M	2500D1M	2554D1M	2702B1M	
Housing		554B1-* Includes P-80F4-* Housing or 840200000† umber Plate	702B1-* Includes P-89A8-* Housing	2500D1-* Includes P-83A3-* Housing P-86D5-* Faceplate P-25E803 Retainer	2554B1-* Includes P-82H6-* Housing P-44E773 Screws (2) P-25E803 Retainer	2702B1-* Includes P-84D8-* Housing P-25E803 Retainer	
Cord, Mounting	D3BN-*		D5AK-*	D3BN-*		D5AK-*	
Set, Hand	G3A4-* Includes 4-Foot Spring H4CJ Cord, G3A-9* Includes 9-Foot Spring H4CJ Cord, or G3A13-* Includes 13-Foot Spring H4CJ Cord.						
Base, Telephone	AC1M AD1M	Note: (Early version) When telephone base is equipped with 7-type dial, orde P-80A4-* dial number plate separately.					
Housing	AC1-* Includes P-25E803 Retainer AD1-* Includes P-25E803 Retainer	 *Add color suffix, refer to Section 500-120-100 for color selection. *9-type dial adapter package (Fig. 1) consists of: P-11E007 Fingerwheel P-11E297 Lock Ring P-44E351 Finger Stop 					
Set, Telephone, Hand	220A-*, 1220A-*, or 2220B-*	†7-Type dial adapter package (Fig. 2) consist of:P-11E007 Fingerwheel					
Cord, Handset	H4DB-* or H5AA-*	 P-11E206 Clamp Plate P-174053 Screens (2) 					
Cord, Mounting, AD1 Base	D5AL-*	 P-21F244 Finger Stop (for use with P-82D4-* number plate) 840161285 Finger Stop [for use with 840200000 (universal) number plate] 					

and 840161285 finger stop (Fig. 2) are required. Provide station number card.

Note: The protrusion of the finger stop support (part of the dial frame) shall be removed in such a manner that the remaining top surface shall not project above the lip of the frame.

 (4) Install handset and mounting cords. Current model C4A ringers are equipped with a boss to retain the handset cord. Secure cord staybands to base (Fig. 4). Connect leads per Table C and place end of cord under ringer frame or boss.

(5) Install housing.

Note: See Section 501-162-101 for 9-type dial assembly and Section 501-162-100 for 7-type dial assembly.

TABLE B

NUMBER PLATE (UNIVERSAL DIAL)

COLOR	SUFFIX	PART NUMBER	
Black	-03	840200034	
Ivory	-50	840200505	
Green	-51	840200513	
Red	-53	840200539	
Yellow	-56	840200562	
White	-58	840200588	
Rose Pink	-59	840200596	
Lt. Beige	-60	840200604	
Lt. Gray	-61	840200612	
Aqua Blue	-62	840200620	
Turquoise	-64	840200646	

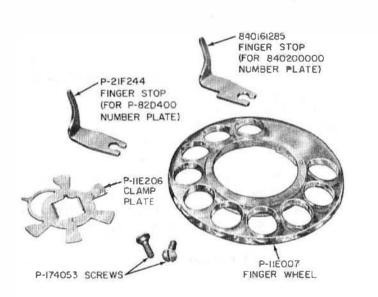


Fig. 2—7-Type Dial Adapter Parts

(b) To assemble a 2500-type telephone set:

 Install handset .and mounting cords. Current model C4A ringers are equipped with a boss to retain the handset cord. Secure cord staybands to base (Fig. 5). Connect leads per Table C and piace end of cord under ringer frame or boss.


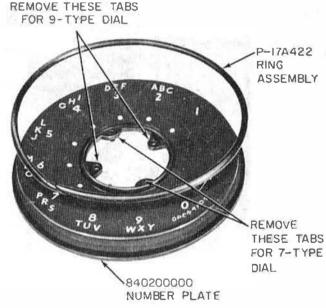


Fig. 3—Universal Dial Number Plate and Ring Assembly

- (2) Provide station number card.
- (c) To assemble 702- or 2702-type telephone set:
 - (1) Remove dial from base without disconnecting leads and lay to side. Install handset

and mounting cords, secure staybands to base (Fig. 6). Connect leads per Table C and replace dial.

- (2) Install housing.
- Remove finger wheel (702-type) or retainer (2702-type) and provide station number card.

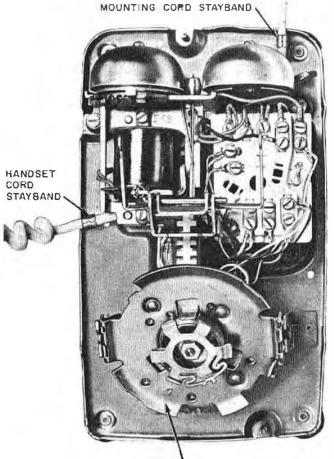

9-TYPE DIAL (NUMBER PLATE, LOCK RING, FINGERSTOP, AND FINGERWHEEL REMOVED)

Fig. 4-500-Type Telephone Set (Interior View)

WALL-TYPE SETS

- (d) To assemble 554-type telephone set:
 - Install dial parts in same manner as for 500-type telephone [refer to Part 3 (b)].

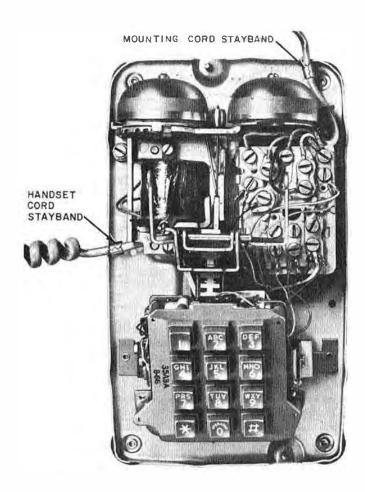


Fig. 5—2500-Type Telephone Set (Interior View)

(2) Install handset cord and connect leads per Table C. Loosen left ringer mounting screw and lift ringer to ease installation of cord. Secure handset cord stayband to base.

(3) Install housing.

(e) To assemble 2554-type telephone set:

- (1) Install handset cord and connect leads per Table C and secure handset cord stayband to base.
- (2) Remove station number card retainer from housing to expose mounting screws.
- (3) Install housing to base, provide station number card, replace retainer.

- (f) To assemble AC1M or AD1M telephone base:
 - (1) Remove station number card retainer from housing to expose mounting screws.
 - (2) Install housing to base, provide station number card, replace retainer.

Note: Current model AC1 and AD1 telephone base housings are equipped with a station number card retainer, early models with a cover. The station number card may be installed with the associated hand telephone set or on the base depending on the customer's preference.

4. CONNECTIONS

(a) Table C lists the internal telephone set connections to be made when the handset cords, mounting cords, or inside wiring leads are to be terminated.

5. MAINTENANCE

 (a) The kit plan requires complete interchangeability between base, housing, and handset. Check line switch plunger for proper operation when handset is placed in on-hook and off-hook condition. Make .normal station tests as required per local instructions.

(b) Handsets, dials, ringers, etc. used in these sets should be maintained in accordance with section covering the particular item.



Defective components are to be tagged with white linen tags and marked "Return to Western Electric Company for repairs."

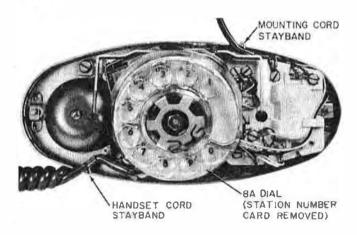


Fig. 6-702-Type Telephone Set (Interior View)

TABLE C

HANDSET AND MOUNTING CORD OR INSIDE WIRE CONNECTING (NOTE 1)

	HANDS	ET CORD	MTG CORD OR INSIDE WIRE		
TYPE Set	WIRE OR LEAD	CONNECT TO NET. OR TERM. STRIP	WIRE OR LEAD	CONNECT TO NET. OR TERM. STRIP	
	W	R	(Tip) G	L1	
500D	W	GN	(Ring) R	L2	
554B	R	R	(GRD) Y	G (Note 2)	
702B	BK	В	W (Note 3)	3	
-			BK (Note 3)	4	
	W	R	(Tip) G	L1	
0500D	W	S* or 10†	(Ring) R	L2	
2500D	R	T* or 11†	(GRD) Y	G (Note 2)	
-	BK	В			
	W	10	(Tip) G	1	
0554D	W	R	(Ring) R	2	
2554B	R	11	(GRD) Y	G (Note 2)	
	BK	В			
	W	R	(Tip) G	L1	
	W	5	(Ring) R	L2	
2702B	R	6	(GRD) Y	G (Note 2)	
	BK	В	W (Note 3)	3	
			BK (Note 3)	4	

*Sets equipped with 425K network.

†Sets equipped with 425G (MD) network.

- Notes: 1. Connections shown are for individual or bridged stations; for other classes of service see appropriate section for particular telephone set in Division 502.
 - 2. If ground not required for service, it can be omitted.
 - 3. Additional connections for 702B and 2702B sets.