



**HOW
TO USE
YOUR
VOLUME
CONTROL
HANDSET**



Western Electric




VOLUME CONTROL HANDSET OPERATING INSTRUCTIONS

Follow these simple instructions to obtain best results from your Volume Control Handset:

Adjust the wheel until you hear the party at the other end of the telephone connection clearly and comfortably. Turning the control in the direction of the arrow will make the other party's voice louder to you.

The numbers on the volume control wheel will help you remember which setting suits your needs best. Since the quality of telephone transmission is well controlled, it should be unnecessary for you to readjust the wheel frequently once you find a satisfactory setting.

Keep the receiver close to your ear and the volume control wheel at the lowest comfortable setting to avoid echo or whistling noises. People using your telephone who have normal hearing should use the setting marked "1".

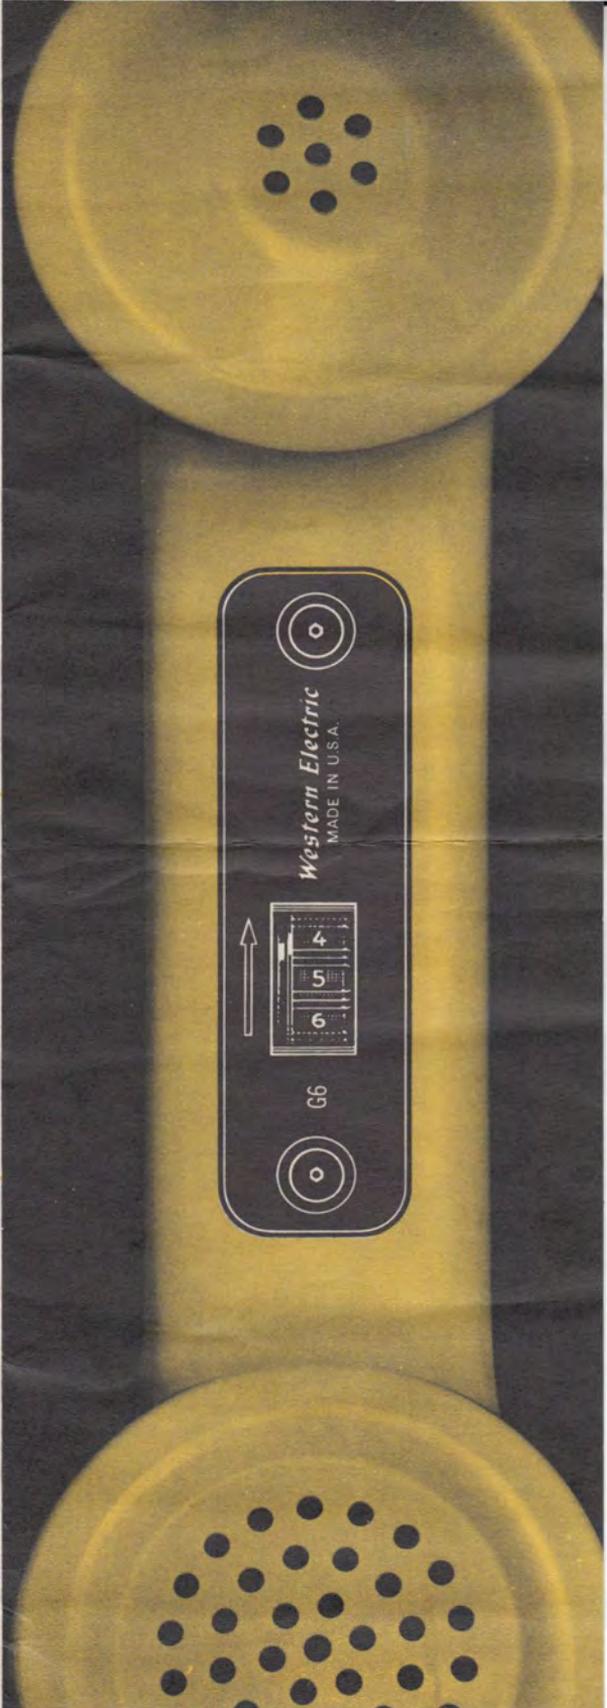

**OTHER BELL SYSTEM PRODUCTS
TO MEET YOUR HOME
COMMUNICATIONS NEEDS**



TOUCH-TONE® calling brings new ease and swiftness to telephoning. Musical tones prompt electronic gear to speed your call. Available on the full range of Bell System telephones.



THE TRIMLINE® phone . . . Small, stylish, and so modern . . . Fits as comfortably in your hand as it does in your home . . . Available in a wide range of appealing colors in desk and wall models.



THE SPEAKERPHONE set lets you converse hands free. Meeting groups can hear, and be heard by, those at the other end of the line. For privacy, phone can be used in normal manner.

Your VOLUME CONTROL HANDSET is supplied to the Bell System by the Western Electric Company.



Western Electric